

Asbestos Types

📅 Wed, Jan 17, 2024 📁 Buildings

An Asbestos Record requires a Type. A number of Types are provided in Ostara. The Asbestos Type section in Core Data allows the Client to specify other Asbestos Types should they require other Types (or would like to rename the provided Types).

1. Choose Building > Asbestos Types from the Core Data menu.
2. Once open, a list of Asbestos Types is displayed. Here, it is possible to choose which Types are applicable by ticking and un-ticking the desired items. There is also the ability to add items using the "Add" button or to edit items using the "Edit" button.

Demo Asbestos Types

Asbestos Types Add

- ☐ Actinolite
- ☐ Actinolite and Chrysotile
- ☐ Amosite
- ☐ Amosite and Chrysotile
- ☐ Amosite and Chrysotile and Crocidolite
- ☐ Amosite and Chrysotile Trace
- ☐ Amosite Trace
- ☐ Chrysotile
- ☐ Chrysotile and Crocidolite
- ☐ Chrysotile Trace
- ☐ Crocidolite
- ☐ Strongly Presumed Asbestos Content

« »

Save Cancel


3. When adding, on clicking the Add button, the Add Asbestos Type screen will appear. All that is required here is the name of the Type to be added.

Add Asbestos Type

Name

OK Cancel

4. After selecting "Edit", the Edit Asbestos Type screen is displayed. All that is required here is a change of the name of the Type selected.

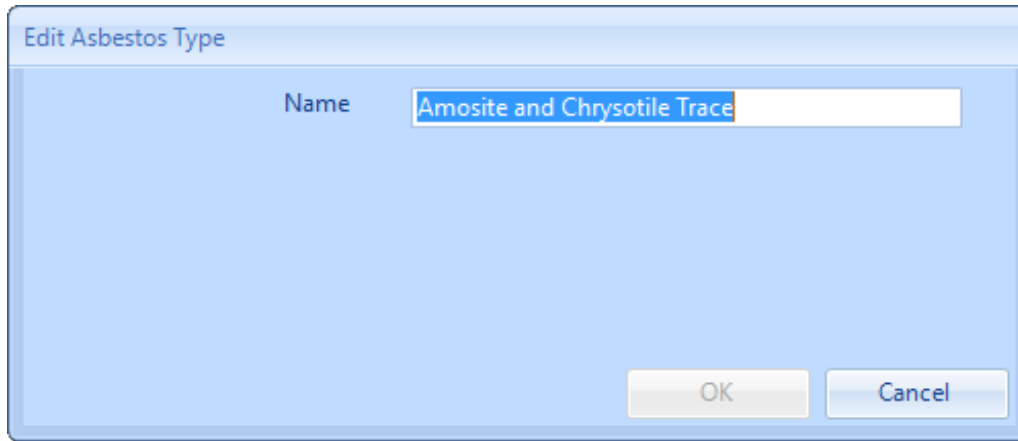

The screenshot shows a standard Windows-style dialog box titled "Edit Asbestos Type". The main area of the dialog contains a label "Name" and a text input field. The text "Amosite and Chrysotile Trace" is entered into the field. At the bottom right of the dialog, there are two buttons: "OK" and "Cancel".

5. Once all the changes have been made, click "Save" to apply them.

Online URL: <https://ostarasystems.knowledgebase.co/article.php?id=31>